


Circuit Diagrams – EasyStart Remote

For Hydronic, Hydronic II, Hydronic II C, Hydronic II Comfort, Hydronic M II, Hydronic S3

EN

X-580
Light (+)

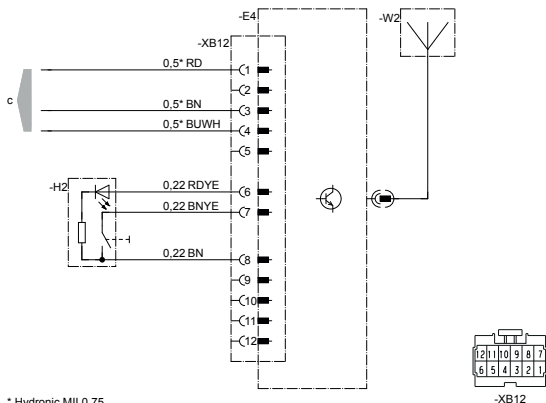

* Hydronic Mill 0.75



22 1000 34 97 33

- E4 EasyStart Remote radio remote control
- H2 Button
- W2 EasyStart Remote antenna
- c to the heater

Cable colours

RD	red	GY	grey	BK	black
BU	blue	YE	yellow	GN	green
WH	white	VT	violet	BN	brown


Connector housing pin assignment -XB12

Pin	Signal	Cable colour
1	Terminal 30 (plus)	red
2	-	
3	Terminal 31 (plus)	brown
4	JE diagnostics / DAT cable	blue / white / vi
5	-	
6	Button LED (+)	red / yellow
7	Button (+)	brown / yellow
8	Button (-)	brown

Connector housing chamber assignment (assignment seen from the cable inlet side).

EN

Installing the tab connector of the lead harness

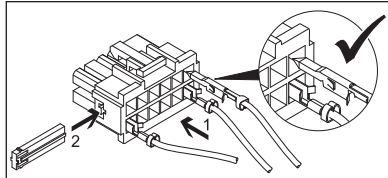

i Please note!

- When installing the connector, ensure that the locking tangs always face the middle of the connector. Only in this position to the tangs latch into the housing (see sketch).

i Please note!

- Please find further information on the devices installation and connection on the enclosed CD.

Headquarters:

Eberspächer Climate Control Systems
GmbH & Co. KG
Eberspächerstraße 24
73730 Esslingen
Hotline: 03976 2350235
Fax hotline: 01805 262624
info@eberspaecher.com
www.eberspaecher.com